

Display Messages

Credit token



No credit: a credit token is required to connect the supply

Commissioning status




Press **# 0 3 1 #** to see if meter is commissioned

Meter not commissioned: press **# 0 4 3 #**
or enter 1275 4194 1448 6450 5970



Meter commissioned: no further action required

Tamper status

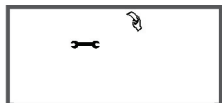

Technical tamper: check the terminal cover is fitted securely and the tamper post is not damaged. A clear tamper token will be required

Abnormal trip conditions



Flashing bar graph: press **# 0 7 3 #** to display the trip condition



Power overload



Current overload



Line/load reversal



Thermal overload



Over voltage



Under voltage

BEC44(09) range Installation guide



We see a world where we can all achieve more using less



We help utilities maximise their service delivery



Our products, solutions and services are simple, efficient and innovative


Tel: +27 (31) 268-1111 • Email: info@conlog.co.za • Web: www.conlog.co.za

Conlog shall not be liable for any consequential loss of whatever nature and howsoever arising including, but not limited to, loss arising from any defect in the product sold which is covered by Conlog's warranty, or from negligence on the part of Conlog, its directors, employees or agents.
© Conlog Part Number: 700036735100

CONLOG
Solutions for utilities

Installation instructions

To display the meter serial number, press **# 1 0 0 #**

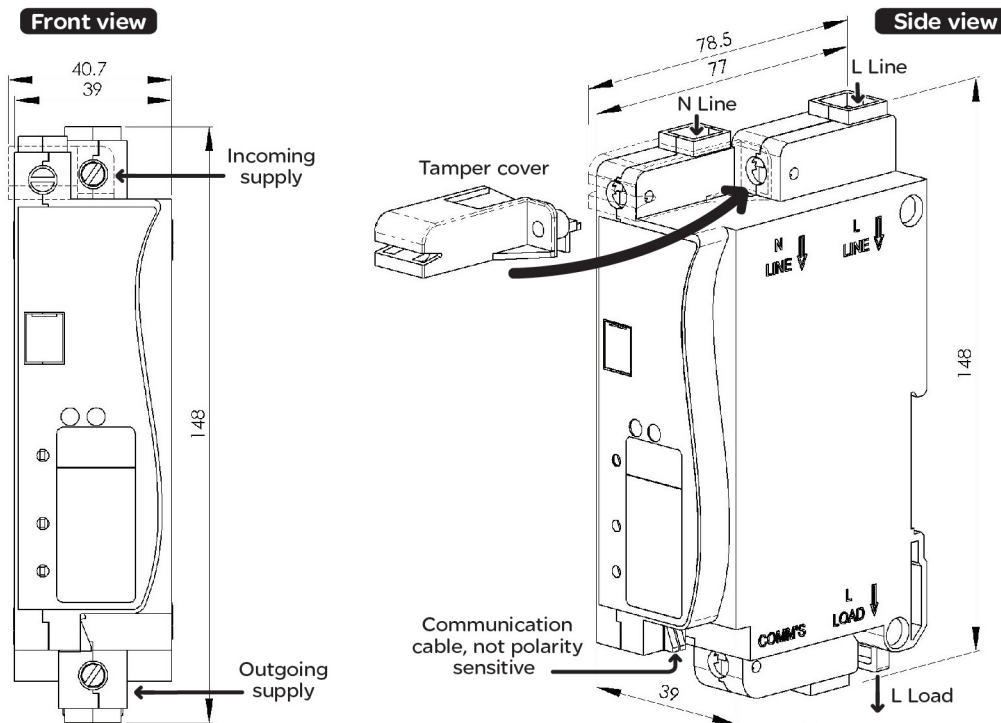

COMPATIBILITY

This device must be used with an User Interface Unit (UIU), which is installed in the consumer's premises. Compatible devices:

- > UIU (09)
- > wUIU (09) + WMI

CAUTION

- > Wiring must be performed by a certified installation electrician
- > Installation must conform with prevailing government standards and safety regulations
- > All dimensions are in millimetres
- > If connecting aluminium cables, bi-metal lugs are recommended
- > It is recommended that BEC44 meters are fitted with a metal oxide varistor (MOV)